



# Lido OG Quick Start Guide

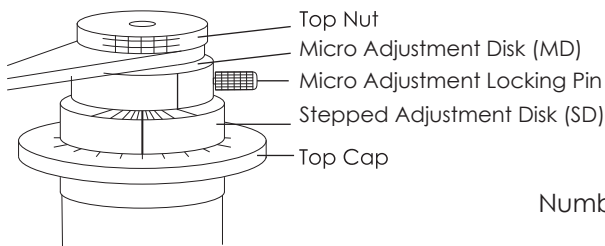

Full Manual available online at:  
<https://www.oehandgrinders.com/OG-manuals>

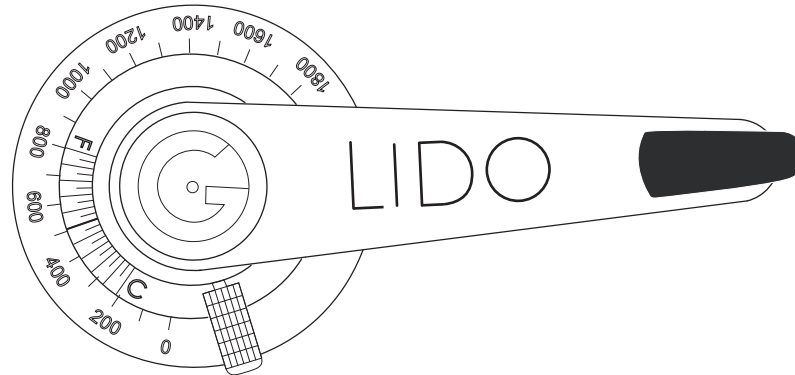

Your Grinder arrives with the adjustment set at MD = 0, SD = 0

Numbers on the Top Cap equal Microns of Vertical Cone Burr Movement (VBM)  
Not Burr Gap, or particle size. 1000 Microns - 1mm VBM

Set SD = 500, grind 10 grams of coffee beans to lubricate the burrs.

For non-espresso coffee, set SD on 1000, grind a few beans & examine - make adjustment as needed by changing SD Setting.

For espresso, set SD on 500, grind a few beans & check - make adjustment to SD if needed, and MD as per instructions in the full manual.

**Caution** - Do NOT change the MD until you understand the operational principles of adjustment as described in the full manual.

**Warning:** When disassembling & reassembling the grinder there exists the possibility of damaging the threads of the MD - this can be easily avoided by using the proper procedure as described in the full manual.